SpikeFast® IJ-30

Application Instructions

1. Cut a slot in the space between the joined rails using a grinder or according to other industry best practices. WVCO recommends at least 0.25 inch (6.4 mm) gap prepared for the application of IJ-30.
2. Form up the sides of the railhead with a suitable material such as a putty or tape.
3. Keep cartridge upright and load cartridge into dispenser (snaps into place).
   a. Remove cartridge nut and cap
   b. Secure mix tube
   c. Begin dispensing with cartridge upright
   d. Waste initial portion
   e. Apply to desired area
4. Apply the IJ-30 in the prepared gap between rails. WVCO recommends slight overfill to ensure the gap is completely filled.
5. To re-use partially dispensed cartridge, remove and discard mix tube then replace the cap and nut. Extra mix tube provided with each cartridge.

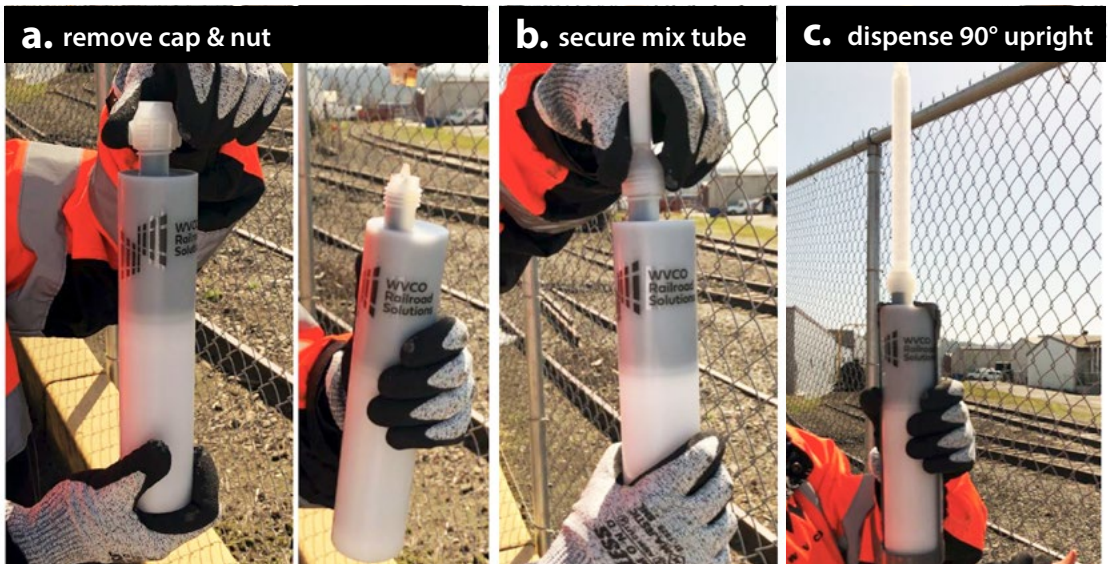



IJ slot prepared (at least .25 inch wide) and adhesive putty placed on each side of the rail.



SpikeFast IJ-30 applied into the slot and filled completely (showing recommended slight overfill)

Document ID: W07-R&D-GUI-019 Rev_0 November 2024